


DIRECTIONS FOR INSTALLING SLATE ROOFING MATERIAL

This slate roofing may be glued on or applied with transfer tape which is our preferred method. When installing the roofing make sure you offset the seams.

To remove the slate from the sprues make several passes along the blank part of each strip of material with a sharp razor knife. Do not try to cut the material off with one pass, it will curl and not lay flat.

Use the heavy gray paper to make the cap at the peak of the roof. Cut a strip about 1/8" wide. Scribe down the center of the strip lightly and fold. This will give you a V shaped cap which can easily be glued to the peak. After the shingles are in place, weather with different shades of gray, ivory and tan. Dry brush all paint.

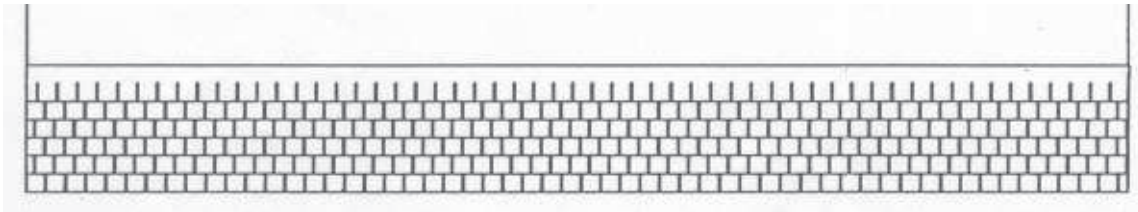

WWW.TICHYTRAINGROUP.COM
TICHY TRAIN GROUP PO BOX 39 PLAINVIEW NY 11803-0039